

Nicab Compact


Installation

When delivered the actuator is in closed position (red light is on), and port 3 on the valve is closed. Port 2 is always open and should therefore be used as inlet or outlet.

The valve should be installed with the actuator in an upright position or along the horizontal line as shown in the figure. The valve can NEVER be installed with the actuator facing down.


The valve is not allowed for usage in environments with humidity above 95% rh.

If the valve is to be placed outside (not recommended) some kind of protection against rain, snow, sunshine etc. must be placed over the valve and actuator.

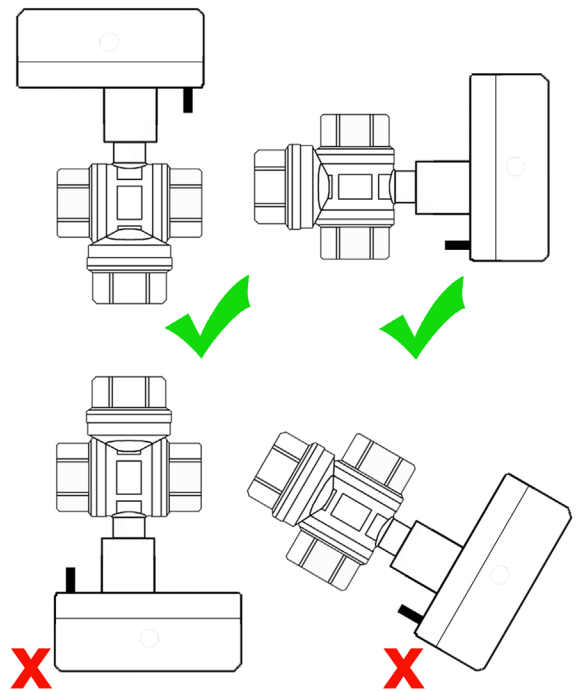


Stem setting

DN15-20

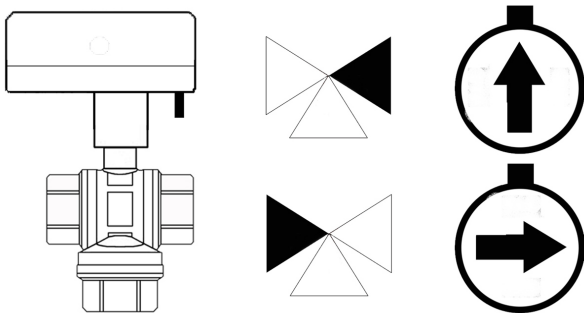

Flow direction

DN15-20

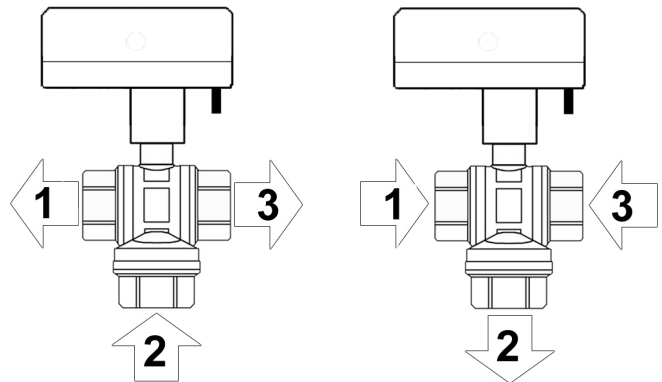

FlowControl

Electrical wiring 230V

Blue = Neutral (N)


Brown = Phase (L1)

Black = Thermostat

Yellow/Green = Ground

Blue and brown are always connected (port 3 is closed and LED is on). When the black cable is connected the valve opens and the LED is turned off.

The 24V actuator is connected the same way.

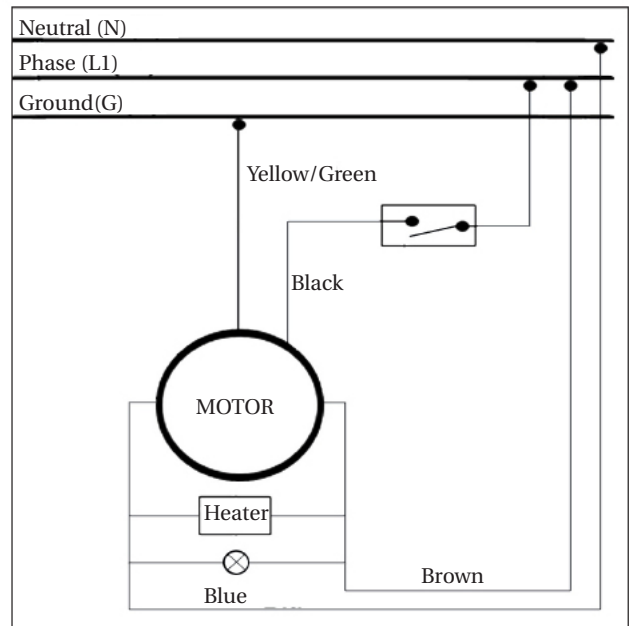

Piping, return & supply

