


# FlowControl


## Electrical wiring AVM 234S

AVM234S F132

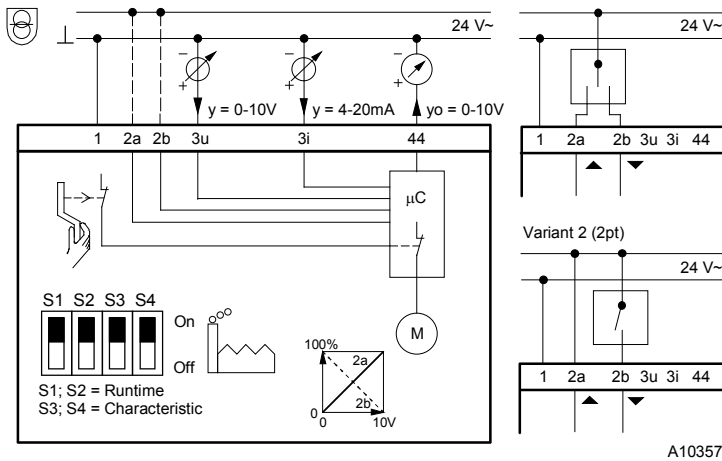


## Electrical wiring AVF 234 (spring return no/nc)


AVF234S F232 (NO)

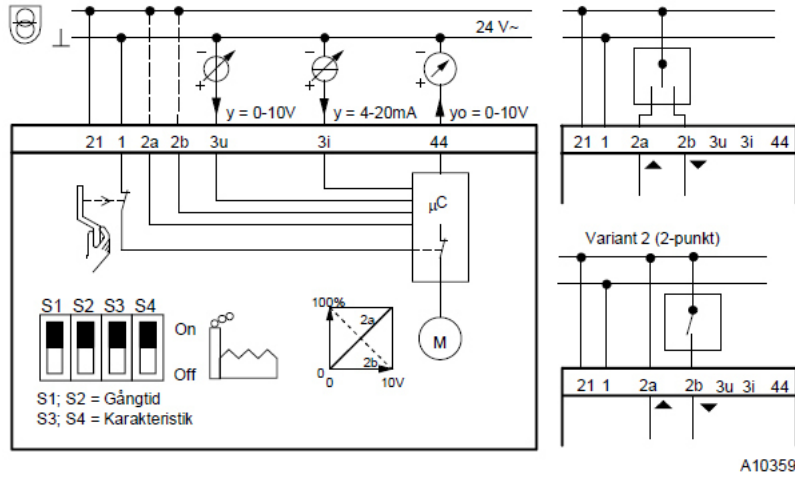

## Accessories

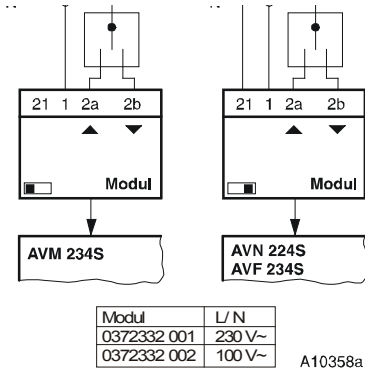

## Electrical wiring AVM321S / AVM322S

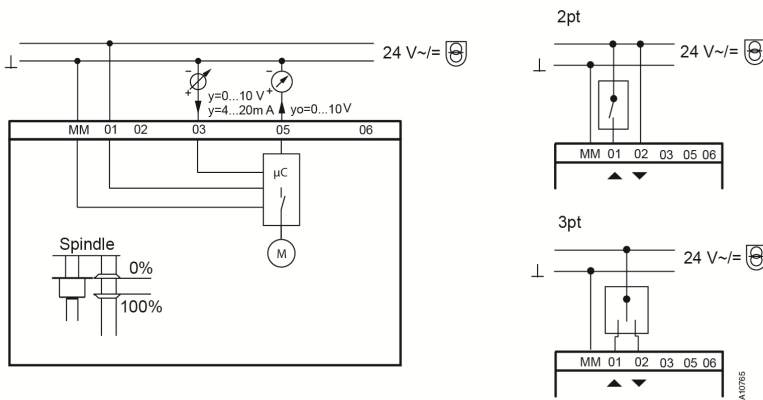

## Installation notes

- Condensation, water etc. along the spindle that can come into the actuator must be avoided.
- Do not install the valve with the actuator below the horizontal line.
- Do not use in environments with higher humidity than 95% rf.